

Notobook PC Shelf Instructions

Classic Series Models • L20 • L20S • L101 • CTL

Instructions

These instructions apply to retro-fitting of PC shelf to models L20, L20S, L101 and CTL only.

Model L2001 uses a different fixing system.

1. Check contents of kit against list above.
2. Shelf fits on the presenter's right hand side only.
3. Measure down 180 mm from top of left leg.
(Top of shelf must clear console top when sliding out - check.)
4. Mark left hole position.
5. Drill left hole with drill bit provided at low speed.
6. Tap hole with tap provided (low speed).
7. Lightly secure left side with Phillips head screws.
8. Hold shelf in position and mark position of hole on right leg. (Check to make sure it is level.)
9. Remove shelf.
10. Drill right side hole.
11. Tap right side hole.
12. Reposition shelf and secure left and right screws.

Components

This product consists of:

- Shelf
- Drill Bit
- Tap
- Phillips Head Screws x 4



Manufactured & Distributed By:



WILSON GILKES
MANUFACTURING IDEAS

P.O. Box 63
Moorebank NSW 1875
337 - 349 Newbridge Road
Moorebank NSW 2170

Telephone: (02) 9914 0900
Fax: (02) 9914 0901
Email: sales@gilkon.com.au

www.lectrum.com.au